CFH DRUM KIT INSTRUCTIONS

Large Drum Kit

Small Drum Kit





Lacing - 8 ft for 10" and 12" drums. 14 ft for 14" and up *please read through instructions before starting*


Awl or Punch

Hammer NOT SUPPLIED NOT SUPPLIED

Tack Pins NOT SUPPLIED



- 1. Soak rawhide in cold water overnight, or 4-8 hours.
- 2. Take rawhide out of the water, lay on a flat surface. With smooth side down, (if needed) trim excess skin hanging, so the drum won't rattle when dry.*picture 1*
- 3. Take rawhide circle and rub back and forth against the edge of the outside area, on a wooden post/chair *picture 2*. This will stretch the rawhide out of proportion, but allow you to fold the hide over the frames edge easier.
- 4. Take one end of lacing and insert into the hole from top to bottom (tie off with a half hitch). Pinch lacing with thumb and pointer finger to keep tight while you tie the half hitch (where it feeds into the hole).*images 3-5* Make another half hitch.*image 6* Take the other end of lacing directly across and repeating the half hitch steps.
- 5. Repeat this process on all the lacing for the drum. *images 7-9 for 10" and 12" kit, and images 20-22 for 14" and up kits* Make sure they are all tight and have the same tension. Cut off excess lacing to no shorter than ½" from knot.*see picture 10*
- 6. Take leather handles and center it where the lacing comes together in center of drum. Wrap the leather handle 3"- 4" at the end*See pictures 11-12*. Split the handle from the end until you reach the lacing. Then take one of the split ends and wrap it around 1 rawhide lace. Tie in a square knot with the other split end.*pictures 13-19*
- 7. Hang to dry (you can use a fan as well).
- 8. NOTE: DO NOT BEAT ON THE DRUM UNTIL IT IS COMPLETELY DRY. DO NOT DRY BY A HEATER, TACKS CAN BE USED TO PIN DOWN THE RAWHIDE

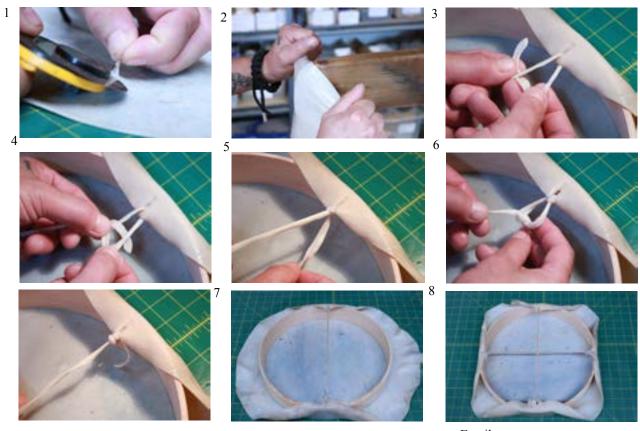

Centralia Fur & Hide 2012 Gallagher Rd. Centralia, WA 98531

Email
Sales@furandhide.com
Web
www.FurandHide.com

